



1. Disconnect from mains.
2. Open the enclosure.
3. Remove the screws.
4. Disconnect the connection of LED light source.
5. Take out the LED driver and LED light source.